



# RAILROADED VS. UP THE ROLL FABRICS


Railroaded (RR)

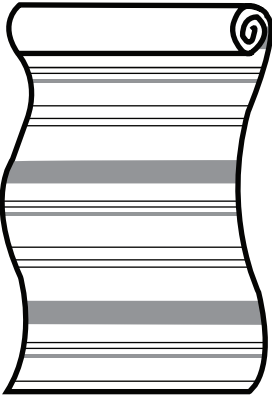

- Fabric pattern or grain runs across the roll from selvage to selvage horizontally
- Commonly used in upholstery

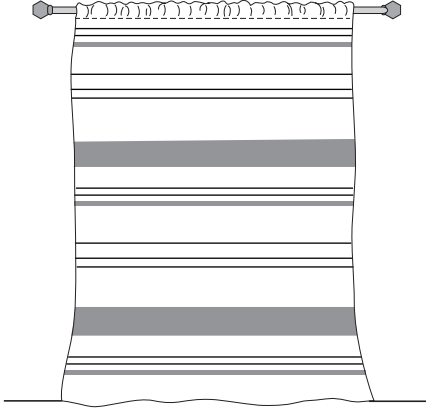

Railroaded Fabrics

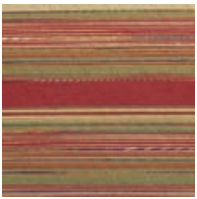

Grandeur Flame, FA5-25




Venezia Teal, FA7-45




Grandeur Flame Curtain Panel

Up the Roll

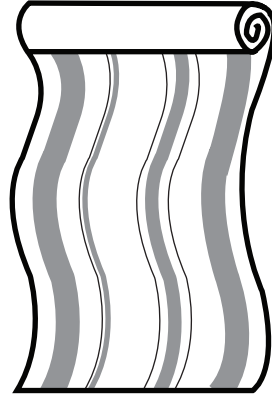

- Fabric pattern or grain runs up the roll vertically, parallel to the selvages
- Commonly used in drapery

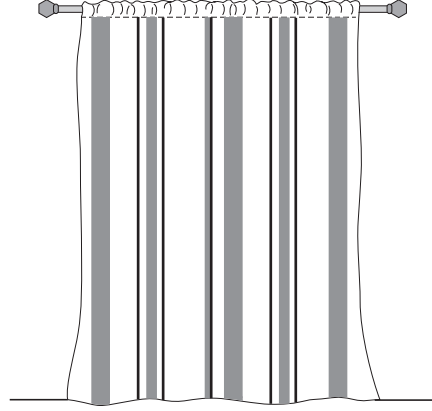


Up the Roll Fabrics



Laurie Petal, FB3-02




Antalya, FA9-84

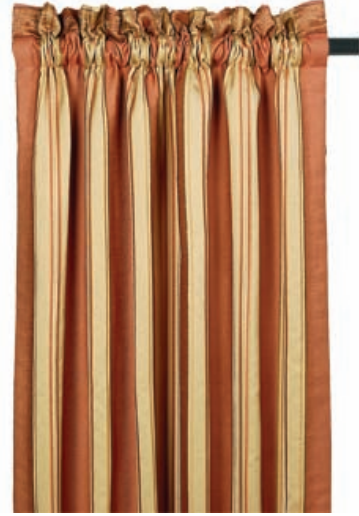


Laurie Petal Curtain Panel

Railroaded (RR)

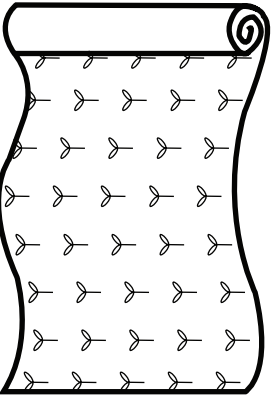

- Fabric pattern or grain runs across the roll from selvage to selvage horizontally
- Commonly used in upholstery

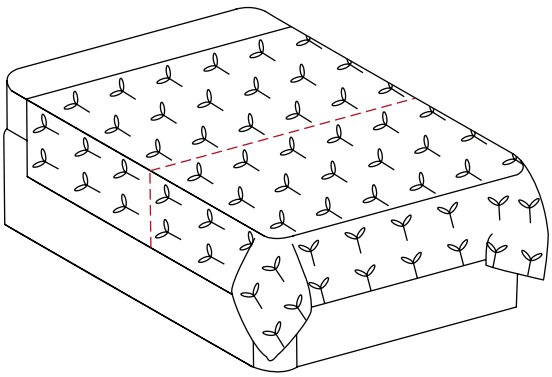

Railroaded Fabrics



Luxembourg Spa, FA9-53




Carlyle, FA9-52




Carlyle Duvet Cover

Up the Roll

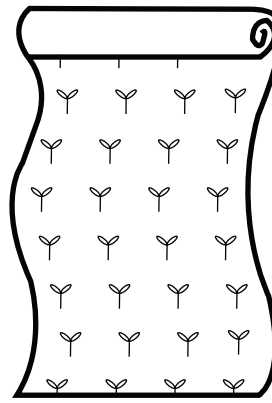

- Fabric pattern or grain runs up the roll vertically, parallel to the selvages
- Commonly used in drapery

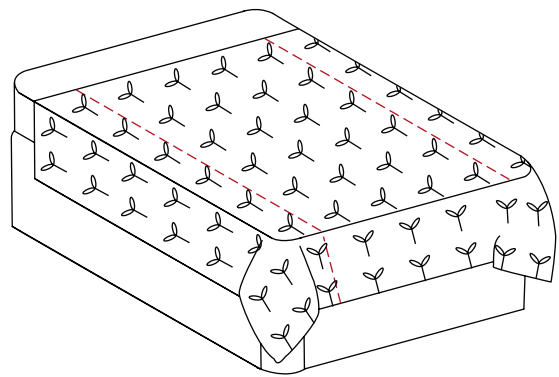

Up the Roll Fabrics



Laurie Gold, FB2-87



Nottingham, FA8-70



Nottingham Duvet Cover