
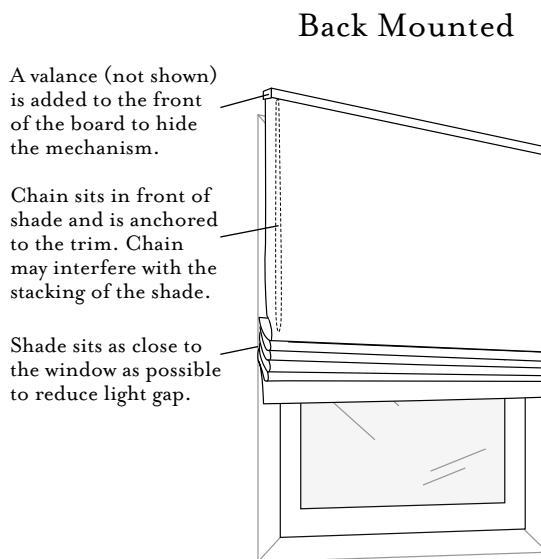



## ROMAN SHADES: THINGS YOU SHOULD KNOW

- We comply with the current American National Standards Institute (ANSI) standards for Roman shades and are working with our suppliers to keep up to date with new and improved mechanisms.
- We are working on a cordless control system shade and hope to make it available soon.
- There are size limitations.  
 Minimum Width: 18"      Minimum Height: 16"  
 Maximum Width: 72"      Maximum Height: 84"
- Relaxed and London shades will "toe-in" at the bottom.

### FRONT VS. BACK OF BOARD-MOUNTED SHADES

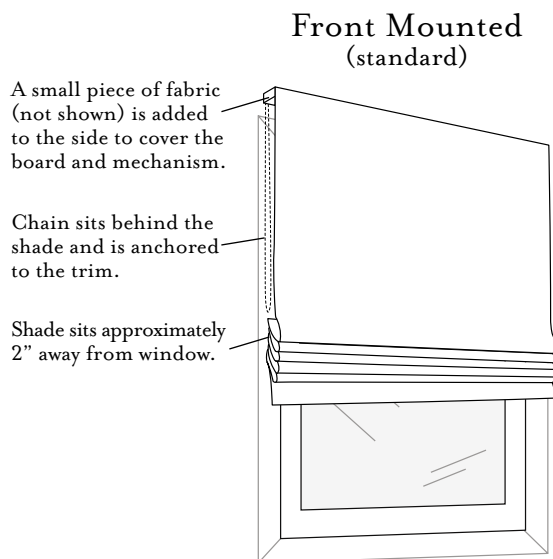

### MEASURING FOR ROMAN SHADES

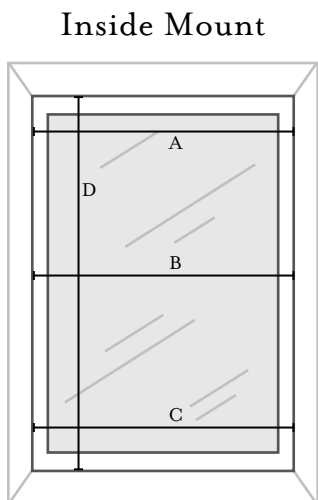

Inside Mount does not cover the window molding. Inside window depth must be at least 1".


Take 3 width measurements:

- A. Top
- B. Middle
- C. Bottom

Use the smallest of these measurements.

D. Length measurement to the sill.

Take exact measurements to the nearest 1/8". The factory will take needed deductions for proper fit.

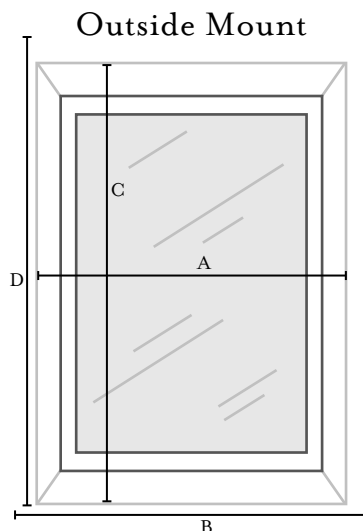

Outside Mount is mounted on the wall above the window (minimum 2").

A. Outside trim to outside trim (horizontal) or

B. Area you want the fabric of the shade to cover. Example, you may want to add 2" or so on each side to maximize light gap coverage.

C. Outside trim to outside trim (vertical)

D. Be sure to add space above the window you want the shade to be mounted on (minimum 2").