

# Upholstered Bed

## Assembly Instructions



Congratulations on purchasing an Eastern Accents upholstered bed! Our beds feature superb craftsmanship and are designed to be easily assembled. This manual provides simple, step-by-step instructions for assembling your new bed.

**Please Note:**

- This assembly process requires two people.
- You will need a Phillips-head screwdriver.
- This bed is designed with center feet on the metal slats. **Do not remove these feet.** They support the mattress and box spring.

Please check for the following items in this package:

- Headboard (1)
- Side rails (2)
- Low footboard (1)
- Metal slats with center feet (3)
- Screws (6)

If you have any questions, please contact Customer Service at 800.397.4556.

*E a s t e r n*  *A c c e n t s*<sup>®</sup>

Phone: 800.397.4556 • Fax: 800.998.3278 • EasternAccents.com

# Assembly Instructions

STEP 1: Prop the headboard against a wall and connect one side rail to each side of the headboard, as shown in FIGURE 1.



FIGURE 1

STEP 2: Connect the footboard to both side rails, using the method from Step 1.

STEP 3: Adjust the width of the 3 metal slats so they reach both notched areas of the side rails, as shown in FIGURE 2.

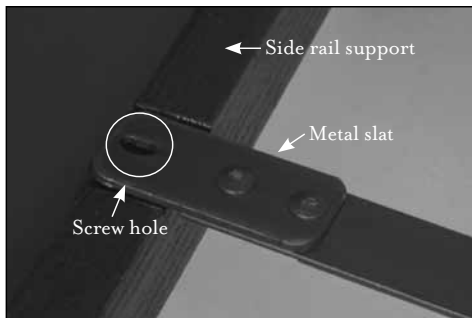


FIGURE 2

STEP 4: Tighten the brass clamps on the metal slats to lock them in place, as shown in FIGURE 3.

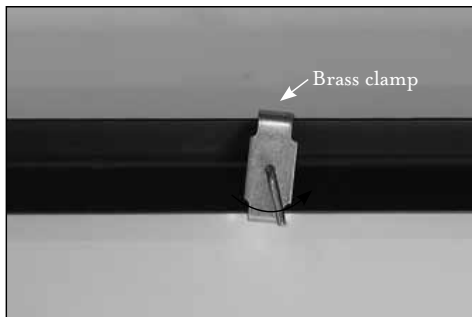


FIGURE 3

STEP 5: Screw the metal slats to the side rail supports using the 6 screws provided. Adjust the center feet as needed—these may need to be at different heights if the floor is not level. See FIGURE 4 for assembled frame example.

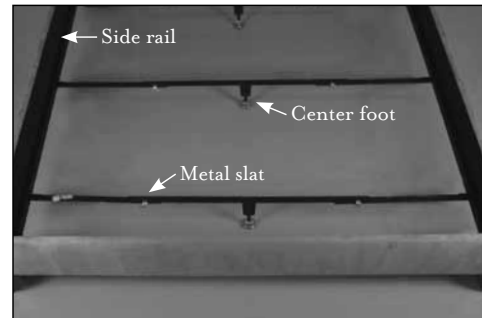


FIGURE 4

STEP 6: **For Corrado Bed Only** affix the wings to the side of the bed using the attached hinges in FIGURE 5.



FIGURE 5

STEP 7: Place the box spring and mattress in the bed frame.